


BEST PRACTICE FOR INSTRUMENT REPROCESSING



Pre-Treatment

Spray down instruments immediately after procedure to prevent soils from drying

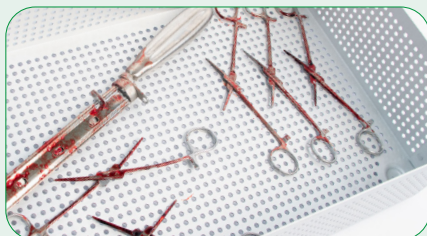

Cleaning

Use pH neutral detergent with anti-corrosives for manual or Ultrasonic Cleaning process



Lubricating

After drying, jointed instruments are sprayed down or dipped in silicon free / mineral oil free lubricant



Sterilization

Instruments placed in pouches with sterilization indicators to ensure proper sterilization is achieved

